
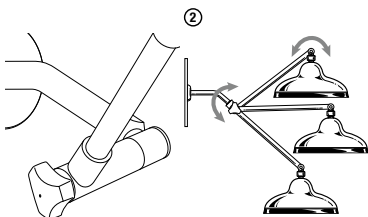


INSTALLATION

1. Attach shower head to arm by tightening hex nut to a snug fit in a clockwise direction. Using wrench or pliers, tighten an additional $\frac{1}{4}$ turn.

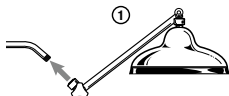

2. Adjust shower head arm to the desired position by loosening knob.
3. Test for leaks and tighten connections as needed.

TROUBLESHOOTING GUIDE

Problem	Solution
Low water pressure or missing spray patterns.	a Clean shower head in white vinegar solution. (See care & cleaning section).
Leaking at pipe pivot ball connection.	a Confirm black restrictor is seated dome side up in hex nut. b Grate bar of soap across the j-pipe threads to act as a sealant.

WARNING:

- 1 To avoid hot water dangers and conserve even more energy, make sure your water heater is set at 120°F (48.9°C) or below.
- 2 Test the tub/shower water with your hand before bathing.
- 3 For additional safety it is recommended that all homes have installed a pressure balance tub and shower valve with the rotational limit stops properly set by a plumber.
- 4 **For external use only.** The potentially deadly amoeba, *Naegleria fowleri*, may be present in some tap water or unchlorinated well water.

CARE AND CLEANING

- To clean heavier deposits, remove shower head and soak face down in 1-2 cups of white vinegar (use white vinegar only) for about 2-3 hours. Replace shower head and run in each mode to flush out vinegar.
- Do not clean or rinse any part with harsh chemicals, heavy duty cleaners, or abrasives; this may damage parts or finish and may void warranty.

LIMITED LIFETIME WARRANTY

Save your receipt as proof of purchase is required for warranty action.

Water Pik, Inc. warrants to the original purchaser of this product that it is free from defects in material and workmanship for as long as the original purchaser owns this product. Water Pik, Inc. will replace any part of the product which in our opinion is defective, provided that the product has not been abused, misused, altered or damaged after purchase. (This includes damage due to use of tools or harsh chemicals.) In the event an item has been discontinued we will replace with what we deem to be the closest product. Water Pik, Inc. is not responsible for labor charges, installation, or other consequential cost. The responsibility of Water Pik, Inc. shall not exceed the original purchase price of the product. This warranty gives you specific legal rights. You may also have other rights that vary where you reside.

Have any questions or need assistance?

For quick service prior to calling have your model number and receipt ready.

In the U.S., call our toll-free Customer Assistance Line **1-800-525-2774**.

www.waterpik.com

Outside the U.S., write us at:
Water Pik, Inc.,
1730 E. Prospect Road,
Fort Collins, CO 80553-0001
U.S.A

Waterpik® is a trademark of Water Pik, Inc. registered in Argentina, Australia, Austria, Benelux, Canada, Chile, China, Czech Republic, EU, Finland, France, Germany, Hong Kong, Hungary, India, Israel, Italy, Japan, Korea, Mexico, Norway, Poland, Russian Federation, South Africa, Spain, Sweden, Switzerland, Turkey, Ukraine, and the United States.

Waterpik® (stylized) is a trademark of Water Pik, Inc. registered in Australia, Canada, China, EU, Hong Kong, India, Israel, Japan, Korea, Mexico, Russian Federation, Switzerland, and the United States.

© 2016 Water Pik, Inc. Printed in China.