


BEFORE INSTALLATION

- Remove old shower head and remove all pipe tape as well.
- Insure that the washer from the old shower head is not connected to the pipe. Use a thin utensil to check inside the pipe for washers, such as a pencil or screw driver. **Do not use your fingers.**

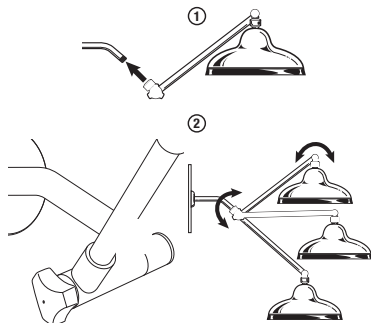

INSTALLATION

1. **Attach shower head to arm by tightening hex nut to a snug fit in a clockwise direction. Using wrench or pliers, tighten an additional ¼ turn.**
2. **Adjust shower head arm to the desired position by loosening knob.**
3. **Test for leaks and tighten connections as needed.**

TROUBLESHOOTING GUIDE

Problem	Solution
Low water pressure or missing spray patterns.	a Clean shower head in white vinegar solution. (See care & cleaning section).
No water flow from shower head.	a Confirm previous shower washer is not in the j-pipe or diverter.
Leaking at j-pipe/diverter connection.	a Confirm washer is fully seated in the diverter nut. b Tightly secure diverter nut with recommended tool.

WARNING:

1. **To avoid hot water dangers and conserve even more energy, make sure your water heater is set at 120°F (48.9°C) or below.**
2. **Test the tub/shower water temperature with your hand before bathing.**
3. **For additional safety for EcoFlow®** or high efficiency shower heads, it is recommended that all homes have installed a pressure balance tub and shower valve with the rotational limit stops properly set by a plumber.
4. **For external use only.** The potentially deadly amoeba, *Naegleria fowleri*, may be present in some tap water or unchlorinated well water.

CARE AND CLEANING

- To clean heavier deposits, remove shower head and soak face down in 1-2 cups of white vinegar (use white vinegar only) for about 2-3 hours. Replace shower head and run in each mode to flush out vinegar.
- Do not clean or rinse any part with harsh chemicals, heavy duty cleaners, or abrasives; this may damage parts or finish and may void warranty.

LIFETIME LIMITED WARRANTY

Save your receipt as proof of purchase is required for warranty action. Water Pik, Inc. warrants to the original purchaser of this product that it is free from defects in material and workmanship for as long as the original purchaser owns this product. Water Pik, Inc. will replace the product which in our opinion is defective, provided that the product has not been abused, misused, altered or damaged after purchase. (This includes damage due to use of tools or harsh chemicals.) In the event an item has been discontinued we will replace with what we deem to be the closest product. Water Pik, Inc. is not responsible for labor charges, installation, or other consequential cost. The responsibility of Water Pik, Inc. shall not exceed the original purchase price of the product. This warranty gives you specific legal rights. You may also have other rights that vary where you reside. **If Product Malfunctions or Becomes Damaged Stop Use Immediately and Contact Water Pik, Inc. for Assistance.**

BINDING ARBITRATION AND WAIVER OF RIGHT TO ASSERT MATTERS IN COURT AND RIGHT TO JURY TRIAL

By purchasing, installing, or using this product you agree that any controversy or claim arising out of or relating to your purchase, use, modification, installation, or removal of this product shall be settled by binding arbitration. The arbitrator's decision will be final and binding. Judgment on the award rendered by the arbitrator may be entered in any court having jurisdiction over the matter. Further, you agree that you will not have the right to litigate any claim arising out of or in relation to your purchase, use, modification, installation, or removal of this product in any court or to have a jury trial on that claim.

Arbitration of any matters shall be administered by the American Arbitration Association and conducted by one arbitrator in accordance with the consumer arbitration rules of the American Arbitration Association in effect at the time of filing of the demand. The venue for all such arbitrations shall be Colorado and any such arbitration shall be subject to the Federal Arbitration Act and Colorado law.

WAIVER OF RIGHT TO PARTICIPATE IN CLASS ACTIONS OR PURSUE CLAIMS IN A REPRESENTATIVE CAPACITY.

Further, by purchasing, installing, or using this product you agree that arbitration must be on an individual basis. This means neither you, nor we, may join or consolidate claims in arbitration by or against other purchasers or users of Water Pik products or the general public. Additionally, you may not litigate in court or arbitrate any claims as a representative or member of a class or in a purported representative capacity on behalf of the general public, other purchasers or users of this product, other persons or entities similarly situated, or in a private attorney general capacity.

Have any questions or need assistance?

For quick service prior to calling have your model number and receipt ready.

In the U.S., call our toll-free Customer Assistance Line **1-800-525-2774**.

www.waterpik.com

Outside the U.S., write us at:
Water Pik, Inc.

1730 East Prospect Road
Fort Collins, CO 80553-0001 U.S.A

© 2020 Water Pik, Inc. Printed in China.

**Water Pik, Inc. a subsidiary of
Church & Dwight Co., Inc.**

1730 East Prospect Road
Fort Collins, CO 80553-0001 U.S.A

www.waterpik.com